

KR2-H series

Highperformance Graphicrecorder



KR2-H Series are advanced touch screen display (keyless) paperless Graphic Recorder with high performance and high operating function along with high visibility 5.7" TFT color LCD display. Universal input with high speed of sampling rate approx. 1s/All points (approx. 100ms / 4 points) and high accuracy rating of $\pm 0.1\%$ FS have been realized. Measured data is stored into internal memory and SD card up to 32GB. It can be monitored by a web browser screen on the multiple computers via intranet or internet, and FTP transfer of the data file and E-mail notification are also available.



*Screen is a framed composite image.

FEATURES

Improved processing speed.

Processing speed has been improved (Compared to conventional products), and Screen scrolling, calculations, PDF output (PDF chart specification only) etc. became faster.

PDF file output of chart is available. (PDF chart specification only)

100mm width chart is created in pdf format and can be printed in the same size as the chart paper.

Easy to store, search, and share chart paper (PDF chart specification only).

Electronic data and PDF charts can be automatically stored on a server or on the cloud, making it easy to access detailed data when needed.

Clear 5.7-inch TFT color LCD display

A variety of display functions are installed on a display with excellent visibility. In addition to real-time/historical trend display, bar graph display and numerical display can be selected according to the application.

Large memory capacity and various recording methods

An SD card slot is standard as an external memory. It is capable of recording a large capacity data up to 32GB. You can select a variety of data storage methods, such as schedule recording by day of the week or date and time, recording start by external signal or event, and data recording before and after trigger points such as alarms.

Stable recording of multiple points with high accuracy and high speed

Achieves high-speed acquisition of approximately 1 s/all points (approx. 100 ms/4 points) and high accuracy of $\pm 0.1\%$ FS. Stable measurement and recording can be performed even at high speeds. The withstand voltage between the input channels is 1000 V AC (excluding the input of the resistance temperature detector), which is a high withstand voltage.

Direct writing on the screen

With attached touch pen, comments can be written on the chart.

USB port on the front

Data saved in the SD card can be extracted to the USB memory stick (max. 8GB USB memory stick) by plugging it into the port.

LAN network support

By using Ethernet, it is possible to build a system that matches the network environment with a variety of functions such as remote monitoring with a browser, FTP server, and e-mail reporting.

Application software (TRAMS) for analysis and data acquisition

Easy play back and editing data files collected by the recorder.

MODELS

KR2□□PH□□□-□□□

Type

S: Standard
D: PDF Chart specification

Measurement point/sampling rate

6: 6 points / 1 sec.
2: 12 points / 1 sec.

Communication interface

G: Ethernet+Low/high order communications
RS485 (Standard)
E: Ethernet
B: Ethernet+low order communications *1,*2
N: None

Alarm output, Contact input (option)

0: None
2: Mechanical relay output (4 points 'c' contact)
7: Digital input (4 points)
8: Mechanical relay output (2 points 'c' contact)
+ Digital input (2 points)

Installation type

A: Panel mounting type
T: Portable type
(Grip and rubber feet attached) *2

Others (Option)

NNN: None
1NN: Custom graphic screen
2NN: High Accuracy Temperature Converter KT-M input *3,*5
3NN: Custom graphic screen
+ High Accuracy Temperature Converter KT-M input *3,*5
N1N: Barcode reader specifications *2,*4
(Barcode reader is sold separately)
N2N: Barcode recipe specifications *3
(Barcode reader/others are sold separately)
NNP: Past profile reply

*1 Barcode Reader Specification (RS-232C D-Sub 9Pin)

*2 Does not comply with CE and UKCA

*3 Only communication interface (option) G can be selected.

*4 Only communication interface (option) B can be selected.

*5 Can be selected only when 1st digit is 2 or 3 and second digit is N.


PSE-822B

KR2-H series

Screens


Real time trend screen

Real time trend display of selected group.
Vertical or horizontal trend can be displayed.

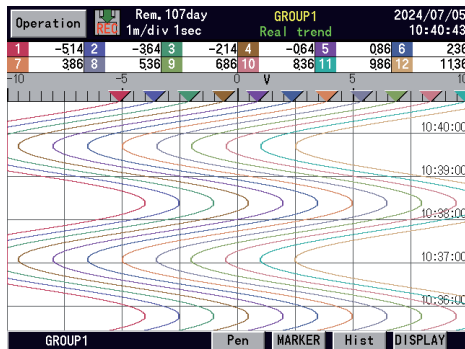


Bar Graph Screen

Bar graph of selected group can be displayed.
Vertical or horizontal bar graph can be displayed.

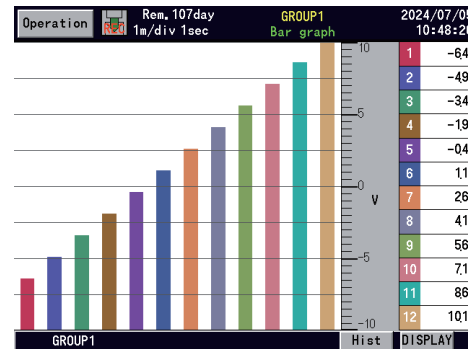


Numerical display

Measured data and alarm status of selected group can be displayed simultaneously.

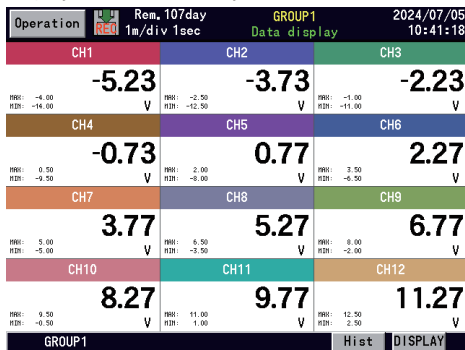


Dual trend screen


2 split display for real time trend and historical trend.
Historical trend can be scrolled.

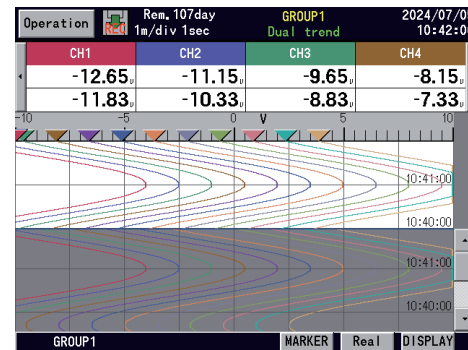

Information display

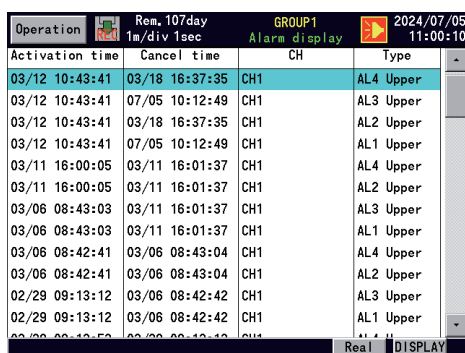


Circular trend screen

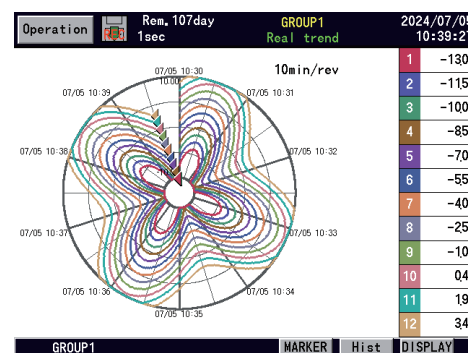

Writing using touch pen

Letters or illustrations can be directly written on the screen and can also be stored on recording. screen.

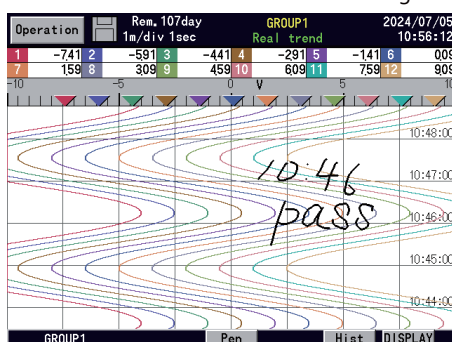

Lower order communication screen

MV and SV of our controllers connected at lower order can be displayed.



■ Input Specifications

Measuring points: 6 Points, 12 Points

Input types : Universal

DC Voltage... $\pm 13.8\text{mV}$, $\pm 27.6\text{mV}$, $\pm 69.0\text{mV}$
 $\pm 200\text{mV}$, $\pm 500\text{mV}$, $\pm 2\text{V}$, $\pm 5\text{V}$, $\pm 10\text{V}$, $\pm 20\text{V}$, $\pm 50\text{V}$ *

(* With built in voltage dividing resistor)

DC Current... Can be used by using voltage dividing resistors (Sold separately)

T/C ... B, R, S, K, E, J, T, N, PtRh40-PtRh20, W-WRe26,
 C (WRe5-WRe26), Platinum II, NiMo-Ni, CR-AuFe, U, L

RTD... Pt100, JPt100, Pt50, Pt-Co

Accuracy ratings: Refer to table of measurement range / accuracy rating

Reference junction

compensation accuracy: K, E, J, T, N, Platinum II

... $\pm 0.5^\circ\text{C}$ or less (measurement input 0°C or above)

R, S, W-WRe26, C (WRe5-WRe26), NiMo-Ni, CR-AuFe, U, L

... $\pm 1.0^\circ\text{C}$ or less (measurement input 0°C or above)

Measuring cycle: 1s / all channels (About 100ms/4 points)

* If recording cycle is set as less than 0.5s the input channels automatically becomes as 4 channels and measurement cycle will be 100ms.

Burn out : Input signal disconnection detection for thermocouple and resistance thermometer inputs.

UP/DOWN/NONE can be selected for each input

Scaling

: Range / Scale optional set up

Digital filter : FIR filter

Allowable signal

source resistance: T/C input (With / Without Burn Out)

And DC voltage input ($\pm 2\text{V}$ or less) ... $1\text{k}\Omega$ or less

DC voltage input ($\pm 5\text{V}$ or less) ... 100Ω or less

RTD... 10Ω or less per wire (equal for all 3 wires)

Input resistance: DC voltage input, TC input... About $1\text{M}\Omega$

Maximum input voltage: DC voltage input ($\pm 2\text{V}$ or less)

And TC input (Burn out disabled) ... $\pm 10\text{VDC}$

DC voltage input ($\pm 5\text{V} \sim \pm 50\text{V}$) ... $\pm 60\text{VDC}$

Between channels: Between various channels 1000V AC or above

Dielectric strength

between channels: (High strength semiconductor relay used)

(B terminal of resistance thermometer is shorted internally between channels)

Common mode

rejection ratio: 120dB or above

Series mode

rejection ratio: 50dB or above

■ Recording specifications

Internal memory: Flash memory (32MB)

External memory: SD card (Capacity up to 32GB) 512MB Standard attached

... ATP Electronics and TDK Corporation made recommended

USB memory

... HAGIWARA Solutions Co., Ltd. made 8GB recommended

Recording cycle: 100, 200, 500ms (When only 4 points)

1, 2, 3, 5, 10, 15, 20, 30s

1, 2, 3, 5, 10, 15, 20, 30, 60 min

Recording data: Measured data... File name (Group name), time day month

and year of recording start, tag, measured data,

alarm status / types, marker text

Setting parameter... All parameters

Storing types: Binary / CSV selectable

Storing method: Manual start / stop

Schedule (Day and time, date and time specification)

Trigger signal (alarm event, digital input)

Data recording of before and after trigger

* Pre-trigger is selectable. Max 950 data.

Recording group: 44 points / Up to 5 groups can be registered

(Total max 100 points can be recorded)

■ Computation specifications

Computation points : Maximum 44 points

Computation cycle : 100ms / all points

Computation types : Arithmetic operations... Addition, subtraction, multiplication, division, remainder, power comparison

Comparison operations... Equal, un equal, greater than, less than,

Logical operations... AND, OR, XOR, NOT

General functions... Round up, round down, absolute value,

square root, exponent of e, natural logarithm,

common logarithm,

Totalization operations... analog integration, digital integration

Channel data operations... Measured data computation,

calculated data computation,

Others ... Dew point, relative humidity, F-value,

SD card remaining capacity, Moving average,

wind direction (Display 16 directions)

■ Alarm specifications

Set up count : Up to 4 alarms can be programmed per channel

Alarm types : Upper limit, lower limit, differential upper limit, differential lower limit (dead band is selectable), abnormal data

Delay function : set up range of alarm delay 0 ~ 3600s

Alarm settings : AND/OR selectable

Alarm output : Refer to option specifications

■ PDF Chart Specifications

By using PDF chart function, data can be saved as PDF file in to SD card as equivalent of data on CHINO's analog recorder or hybrid recorder chart paper.

Output details: File information... Select from below, Information regarding the file is printed on the top of the file.

Chart speed, Instrument name, Serial NO, Software version, Group name, Batch name, Lot NO, Batch text, Original data file name, channel parameters

Lines ... Measured data is displayed in graph based on the display scales set in the channel parameters Color of lines on the chart is output as color set in channel parameter

Data ... Data is printed regularly at the time set in Data interval print
 Scale channel NO. ... Prints channel NO, tag, and scale minimum / maximum at that time are printed

Time line ... Printing is done by a cycle corresponding to the chart speed Start point of cycle is 00:00

Output method: Auto output ... PDF chart of a whole file is created

automatically at the file completion

Output from internal memory file:

... Output PDF chart from internal memory file

by specifying the time range

Output from external memory file:

... Output PDF chart from external memory

(SD card or USB memory) file by specifying the data range.

Drawing settings: Chart speed

... Chart length at 1 hour (or 1 minute)

Chart width ... 100mm

Connection between dots ... [OFF] As dot printing type recorder, dotting is done on the point of the recording data.

[ON] Connect intervals between dots

to create a chart as pen type recorder

Auto range ... Setting of auto range switching function

if the data exceeds the range.

Usually selected from none, normal, overlap.

PDF file protection: None

... Can be edited by Acrobat etc

Normal

... it does not allow 'Changing the document' and page extraction'.

(Printing and signing) etc is possible

Complete

... All the editing functions are not allowed.

Selection of Paper: Chart paper, A4, A3, letter

(Output on chart paper in case of Auto)

■ Display specifications

Display: 5.7 inch TFT color LCD VGA (640×480 Dots)

Display types: Measured data display (Trend display, numerical display,

bar graph display, circular chart display)

Historical trend display (Can be displayed along with real time trend)

information display (alarm, marker list, file list) setting screen

(alarm, computation, memory, system, maintenance, communication etc)

Trend display : 12 color display

Display groups Maximum 5 groups

Display points Maximum 44 points per group

Time axis direction Vertical Horizontal or circular

Line thickness Can be selected from 1 to 5

Scale display 4 Scales

Tag, numerical value to be displayed or not, markers

Data value display : Display groups Maximum 5 groups

Display points Maximum 44 points per group

Display details Measured value, Channel / tag, unit, alarm status

Bar graph screen : 12 color selectable

Display groups Maximum 5 groups

Display points Maximum 44 points / group

Display direction Vertical or horizontal

Scale display 1 scale

Information display : Alarm display (alarm activation / released history display)

Device information (Model, Serial NO, options, others)

LCD back light : Auto / Manual OFF function

Brightness 4 levels adjustment

* LCD display may contain some pixels that always or never illuminate and the brightness of some areas of display may appear uneven. These are typical LCD performance characteristics and do not constitute malfunctions.

KR2-H series


Communication function

Ethernet

Media :Ethernet (10BASE-T/100BASE-TX)
 FTP Server :Data file can be read from network computer
 FTP Client :Transfer of data file to network server
 SNTP client :Time can be synchronized with the SNTP server on the network
 Web server :Conformed to HTTP1.0... Displays the alarm, information of maintenance by browser software (Microsoft Edge)
 *Password can be set

E - Mail :E-mail notification at specified time for alarm activation
 Report data at specified time is selectable from all registered data
 Notification addresses Maximum 8 contacts

Connectivity

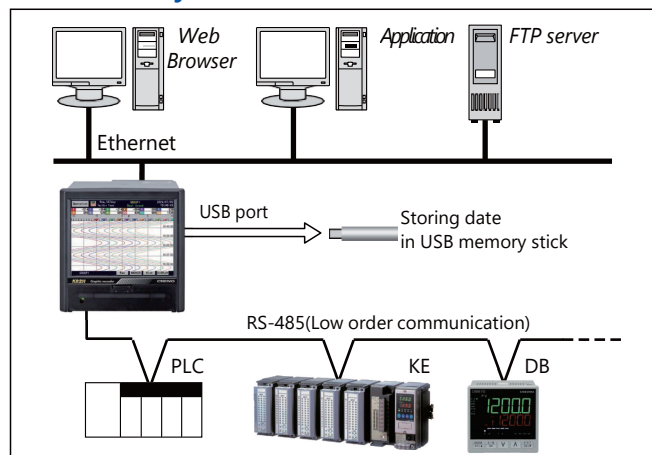

General specifications

Rated power voltage:100-240V AC (universal power supply) 50/60Hz
 Maximum power consumption:35VA
 Reference operation condition:Ambient temperature 21 TO 25°C, 45~65%rh
 Power voltage 100VAC $\pm$ 1.0%
 Power frequency 50/60Hz $\pm$ 0.5%
 Attitude Left / right 0°, forward/backward 0°
 Warm up time Longer than 30 minutes
 Display luminance 2
 Normal operating condition:Ambient temperature 0 to 50°C, 20 to 80%rh
 Power voltage 90~264V AC
 Power frequency 50/60Hz $\pm$ 2%
 Attitude Left / right forward/backward 0°, Backward tilting 0°to 20°
 Display luminance less than 2
 Transport condition :At the packed condition on shipment from factory
 Ambient temperature -20 to 60°C,
 Ambient humidity 5 to 90%rh (No dew condensation)
 Vibration 10~60Hz 4.9m/s² (2.05G) or less Shock 392m/s² (2.40G) or less
 Storage conditions :Ambient temperature -20 to 60°C,
 Ambient humidity 5 to 90%rh (No dew condensation)
 Power failure protection :FLASH memory and SRAM stores the settings
 Data is stored in FLASH memory
 Lithium battery backup the clock and parameter RAM for more than 5 years.
 (with the condition as operations for 8 hours or more a day).
 Insulation resistance :Secondary terminals and protective conductor terminals 20M Ω or more at 500VDC
 Primary and protective conductor terminals 20M Ω or more at 500VDC
 Primary and secondary terminals 20M Ω or more at 500VDC
 However, Primary terminals : power terminals : (L,N), alarm output terminals
 Secondary terminals : measuring input terminals, digital input terminals, communication terminals
 Dielectric strength :Secondary terminals and protective conductor terminals 1 minute at 500VAC
 Primary and protective conductor terminals 1 minute at 1500VAC
 Primary and secondary terminals 1 minute at 2300VAC
 Primary terminals : power terminals : (L,N), alarm output
 Secondary terminals : measuring input terminals, digital input terminals, communication terminals,
 Case assembly material :Front... Flame-resistant polycarbonate resin (frame)
 Case... Steel
 Case :Front...Black (Equivalent to Mussel N3.0)
 Case...Gray (Equivalent to Mussel N7.0)
 Weight :2.1kg
 Mounting :Panel mounting
 Terminal screws :protective conductor...M4.0
 Measuring input terminals, alarm output terminals,digital input terminals, ...M3.5
 Communication terminals ...M3.0
 Clock accuracy : $\pm$ 2 minutes / 30 days (excluding errors due to power ON / OFF under the reference operating conditions)

Standards

EMC Directive :EN61326-1 classA (CE, UKCA)
 *The indication equivalent to $\pm$ 1mV may vary under the test environment by EMC directives.
 Low voltage directive:EN61010-1 (CE, UKCA)
 EN61010-2-030 compliant (CE, UKCA)
 Over voltage category II, Pollution Degree 2
 Transient overvoltage: 2500V
 Environment directives: RoHS (CE, UKCA)
 EN IEC63000 complaint
 (Monitoring and control equipment, including industrial devices)
 Dust / splash proof :IEC60529 IP54(Front)

Option specifications

Options	Specifications
Alarm output	Mechanical relay (c contact) output for alarm activation and input error Output points :4 or 2 points Contact capacity : resistive load 3A, inductive load 1.5A (Maximum voltage 240 VAC or 30V DC)
Digital input Non-voltage contact input (4 or 2 points)	ON/OFF Signal ON/OFF input recording Pulse input Maximum 10Hz pulse input Used for flow rate, operation time and frequency External drive Following operations are available (Selectable by parameter) • Data memory trigger • Marker display • Integrated calculation reset
Communication interface	High and low order communication Communication interface for high and low order RS-485 MODBUS Can be used by choosing one function from following 4 functions • Communication interface for high order unit • Low order instrument communication (Device selection method) Communication with MODBUS-RTU compliant instrument is possible by specifying lower order instrument communication • Low order instrument communication (Device selection method) Displaying and recording of input data of devices connected to the lower level, recording data in PLC registers and parameter settings, measured values, set values, etc. for up to 31 controllers is possible Recording points: 6 Point specifications ...34 points 12 Point specifications ...28 points Connectable models:KE, KR2S00, KR3S00, KR2000, KR3000, KR2D00, KR3D00, KR2-H, KR3-H, LE5000, AL4000, AH4000, DB600, DB1000, DB2000, KP1000, KP2000, DP-G (Data collection only), JU, JW, SE3000 • Transfer of KR2-H input data to PLC. Only PLC can be connected. Data writing points:44 points PLC that can be connected: Mitsubishi MELSEC ...AnA, QnA, QnAS, Q, FX series(1C frame only) Omron...SYSMAC Series Note) For connecting with Omron PLC, line converter (sold separately) is required
Lower order communication	Interface for lower order communication RS-232C • Bar code scanner Marker writing, group displays switch over, batch operations can be performed depending on bar code scanned.
Ethernet	KR2-H can be connected to network using Ethernet (10BASE-T/100BASE-TX) This is required when using below functions • FTP server • FTP client • SNTP client • Web server • E-Mail • MODBUS TCP
Custom graphic screen	Creating graphic screen on PC and display to KR screen using CF card is possible by using KR Screen Designer (Option). Values measured by KR can be placed on the screen.
KT-M input	Digital communication (RS-485) with High Accuracy Temperature Converter KT-M
Portable type	Handle and rubber feet for easy carry

Accessories sold separately

Name	Capacity
Resistor for DC current input 100 Ω	For 50mA
Resistor for DC current input 250 Ω	For 20mA
SD card	512MB, 1GB, 2GB, 8GB, 32GB

■ Measuring ranges and accuracy

※FS= measuring range

Input type		Measuring range		Accuracy ratings
DC voltage		−13.80 to 13.80mV		±0.1%FS±1digit
		−27.60 to 27.60mV		
(with built-in voltage divider)		−69.00 to 69.00mV		±0.1%FS±1digit
		−200.0 to 200.0mV		
		−500.0 to 500.0mV		
		−2.000 to 2.000V		
		−5.000 to 5.000V		±0.1%FS±1digit
		−10.00 to 10.00V		
		−20.00 to 20.00V		±0.2%FS±1digit
		−50.00 to 50.00V		
T/C	K	−200.0 to 300.0°C		±0.1%FS±1digit *−200 to 0°C: ±0.2%FS±1digit
		−200.0 to 600.0°C		
		−200 to 1370°C		
	E	−200.0 to 200.0°C		±0.1%FS±1digit *−200 to 0°C: ±0.2%FS±1digit
		−200.0 to 350.0°C		
		−200 to 900°C		
	J	−200.0 to 250.0°C		±0.1%FS±1digit *0 to 400°C: ±0.2%FS±1digit
		−200.0 to 500.0°C		
		−200 to 1200°C		
	T	−200.0 to 250.0°C		±0.1%FS±1digit *0 to 400°C: ±0.2%FS±1digit
		−200.0 to 400.0°C		
	R	0 to 1200°C		±0.1%FS±1digit *0 to 400°C: ±0.2%FS±1digit
		0 to 1760°C		
	S	0 to 1300°C		±0.1%FS±1digit *0 to 400°C: ±0.2%FS±1digit
		0 to 1760°C		
	B	0 to 1820°C		±0.1%FS±1digit *0 to 400°C: ±0.15%FS±1digit
	N	−200.0 to 400.0°C		±0.15%FS±1digit *−200 to 0°C: ±0.3%FS±1digit
		−200.0 to 750.0°C		
		−200 to 1300°C		
	W-WRe26	0 to 2315°C		±0.15%FS±1digit *0 to 100°C: ±4%FS±1digit *100 to 400°C: ±0.5%FS±1digit
	C(WRe5-WRe26)	0 to 2315°C		±0.2%FS±1digit
	PtRh40-PtRh20	0 to 1888°C		±0.2%FS±1digit *0 to 300°C: ±1.5%FS±1digit *300 to 800°C: ±0.8%FS±1digit
	NiMo-Ni	−50.0 to 290.0°C		±0.2%FS±1digit
		−50.0 to 600.0°C		
		−50 to 1310°C		
	CR-AuFe	0.0 to 280.0K		±0.2%FS±1digit *0 to 20K: ±0.5%FS±1digit *20 to 50K: ±0.3%FS±1digit
	PlatinelII	0.0 to 350.0°C		±0.15%FS±1digit
		0.0 to 650.0°C		
		0 to 1395°C		
	U	−200.0 to 250.0°C		±0.15%FS±1digit *−200 to 0°C: ±0.3%FS±1digit
		−200.0 to 500.0°C		
		−200.0 to 600.0°C		
	L	−200.0 to 250.0°C		±0.1%FS±1digit *−200 to 0°C: ±0.2%FS±1digit
		−200.0 to 500.0°C		
		−200 to 900°C		
RTD	Pt100	−140.0 to 150.0°C		±0.15%FS±1digit
		−200.0 to 300.0°C		
		−200.0 to 850.0°C		±0.1%FS±1digit *700 to 850°C: ±0.15%FS±1digit
	JPt100	−140.0 to 150.0°C		±0.1%FS±1digit *−140.0 to 150.0°C: ±0.15%FS±1digit
		−200.0 to 300.0°C		
		−200.0 to 649.0°C		±0.15%FS±1digit
	Pt50	−200.0 to 649.0°C		±0.1%FS±1digit
	Pt-Co	4.0 to 374.0K		±0.15%FS±1digit *4 to 50K: ±0.3%FS±1digit

Note : The accuracy ratings are converted in to the measuring range under reference operating condition. Thermocouple input does not contain reference junction compensation accuracy.
K,E, J, T, R, S, B, N:IEC584, JIS C1602-1995
W-WRe26,PtRh40-PtRh20, Platinel II, NiMo-Ni,
Cr-AuFe:ASTM Vol14.03
C(WRe5-WRe26):JIS C1602-2015 U(Cu-CuNi), L (Fe-CuNi):DIN43710
Pt100:IEC751 (1995), JIS C1604-2013,
JPt100:JIS C1606-1989, JIS C1604-1981
Pt50:JIS C1604-1981

■ Application software

■ Integrated application software "TRAMS"


TRAMScan can be connected to our recorders, controllers, setting units and PC and operations like parameter settings, data recording and data analysis can be performed.

Analysis function


This software is used to play back and display data files collected by KR2-H series recorder and to perform waveform processing and editing. In addition to playback and display of vertical and horizontal trends, the software has analysis functions like partial graph magnification and message insertion.

• Display

Trend screen (Vertical flow)

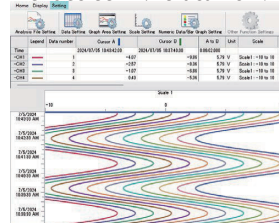

Trend screen (Horizontal flow)

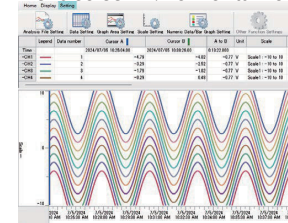

• Main functions

■ Trend display

Trend display (vertical flow), trend display (horizontal flow) is selectable

■ Data list display

Recorded data is list displayed

■ Bar graph

stacked graph

■ Numerical data

All / Maximum value / minimum value / Average value / Standard deviation / Median value / can be displayed in list

■ Alarm

Alarm activation status of various levels of numerical data

■ Various settings

Trend screen, scale axis, time axis, analysis file title input

■ Data conversion function

Export to EXCEL, CSV and TEXT file is possible

■ Parameter setting function

Online settings of various parameters, saving and changes in parameter file is possible

■ Recording function

Online collection of data and play back of collected data is possible

• Operating environment


CPU	1GHz or more 32bit or 64bit
OS	Microsoft Windows 10 (32bit/64bit) Microsoft Windows 11 (64bit) *.NET Framework4.7.2 or above should be able to be installed
memory	1GB or above(32bit), 2GB or more (64bit)
Hard disk	2GB or more free disk space
Language	Japanese, English, Korean

※Display language mentioned is for PC and device is not included


■ Accessories

Name	Quantity	Details
①User manual	1	INE-952□[General] INE-883□[Communication] *CD-ROM PDF chart output software, Recipe creation software sample
	1	KR3S-02-□(Wiring and installation) *A4 Booklet
	1	RZMC-02-□(SD Card manual)
②Mounting brackets	2NOS	For panel mounting
③Terminal screws	5NOS	M3.5 for measuring input terminals (Spare)
④SD Card	1	RZ-SMC-512(512MB)


■ Terminal arrangement

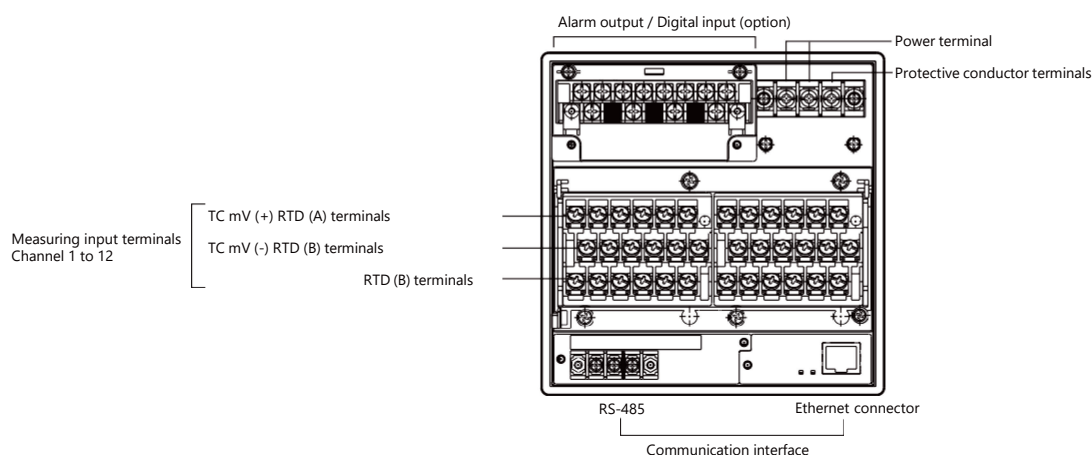


• Alarm relay output (4 points 'c' contact) (option)

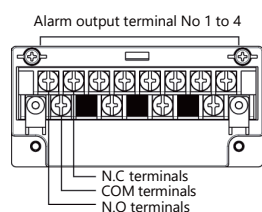

• Digital input (No voltage contact input 4 points)

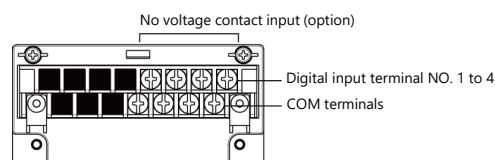


• Alarm relay output (2 points 'c' contact) + Digital input (No voltage contact input 2 points) (Option)

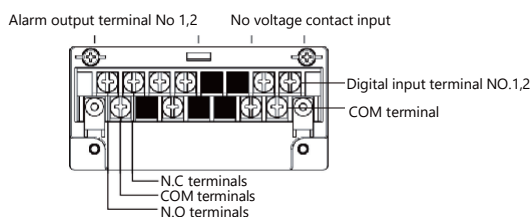


• Communication interface

Communication terminal block Ethernet+ High , low level communication (RS-485)

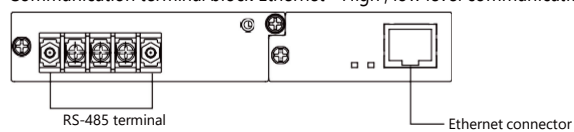


Communication terminal block Ethernet+ low level communication (RS-232C)

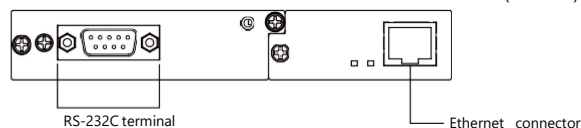


■ Dimension


• Panel mounting type

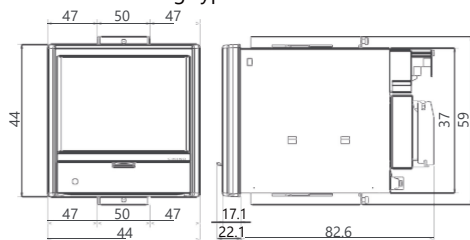

• Portable type (with handle and feet)

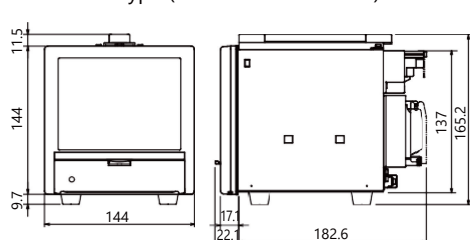

■ Panel cut out

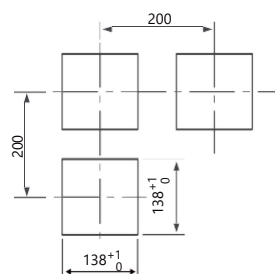

Unit: mm

Specifications subject to change without notice. 2026.8